


CASTER ASSEMBLY

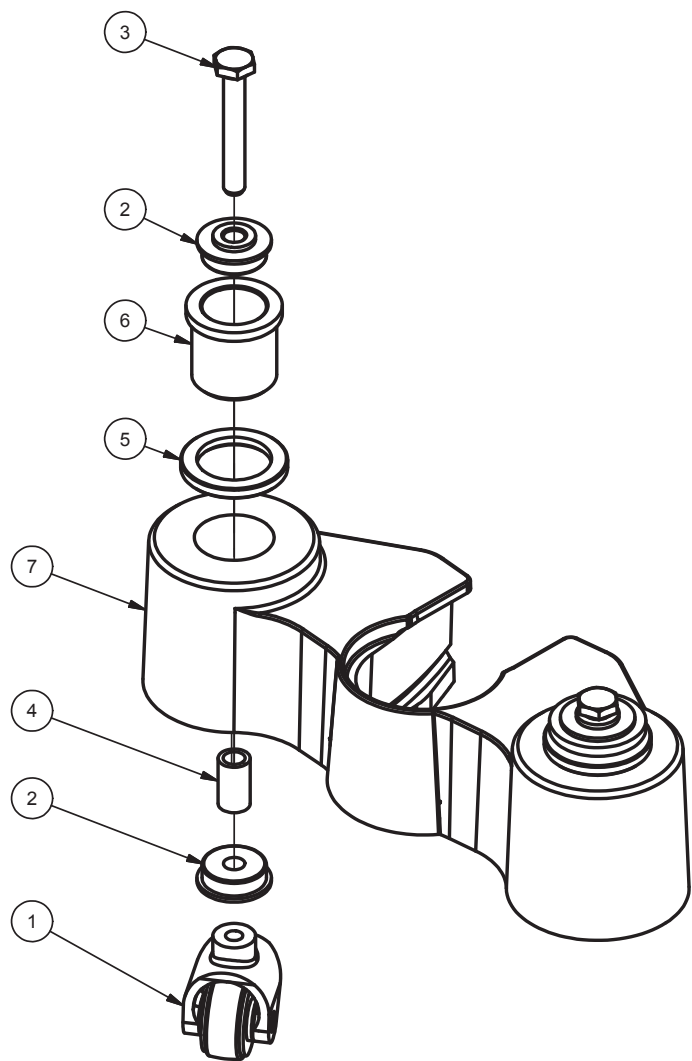

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	10212A	WHEEL & YOKE ASM.
2	4	50740A	BEARING, BALL, 1/4 X 3/4, SHIELD
3	2	85702A	SCR 1/4-20 X 1 3/4 HX ST CAP
4	2	298215	COLLAR, SPACING
5	2	920670	NUT, LOCK, ADJUST
6	2	960130	SCREW, SWIVEL, CASTER
7	1	AS087500	BRACKET, CASTER